



6576 safety circuit power failure


Error code 6576 WPR safety circuit power failure

Measures

	Action	Info
1	None.	•

Additional measures

	Action	Info
2	Disconnect 06X3 from the Preheater plate, WPR.	• Pre Heater WPR, 0665
3	If the error is no longer present when Preheater plate, WPR is disconnected: <ul style="list-style-type: none"> Check wiring harness and connections between the Preheater plate, WPR and the PBA beagle power (22PBA02) and repair if necessary. 	• Wiring Diagram
4	If the problem persists when Preheater plate, WPR is disconnected: <ul style="list-style-type: none"> Disconnect 2205X13 from the Power supply unit. 	• Wiring Diagram
5	If the problem persists: <ul style="list-style-type: none"> Replace the PBA beagle power (22PBA02). 	• Remove the PBA beagle power (22PBA02)
6	If the error is no longer present: <ul style="list-style-type: none"> Check wiring harness and connections between the PBA beagle power (22PBA02) and the Power supply unit and repair if necessary. 	• Wiring Diagram

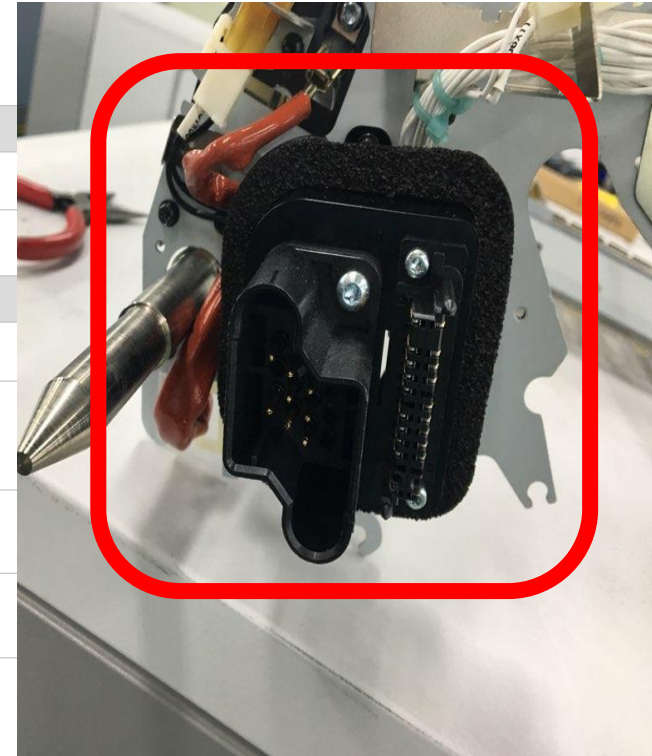

증상	비글파워, 비글코어, 파워유닛, 프리히터 교체 에러 동일 프리히터 케이블 제거 후 기동에도 에러 변하지 않음 (정상 기기 E6522)
해결	프레임 교체 1070041791 SUPPORT FRAME ASSY (PACKED)